


## 9. Explosionszeichnung Farbspritzpistole PJ HVLP

Für die Ersatzteilbestellung verwenden Sie bitte folgende Angaben:

- Bezeichnung des Werkzeugs (Farbspritzpistole PJ HVLP)  
Artikelnummer des Werkzeugs und Positionsnummer des Ersatzteiles (z.B. 0 - 210 1600 - 12)
- Bezeichnung des Ersatzteiles (Griff)
- Bestellmenge

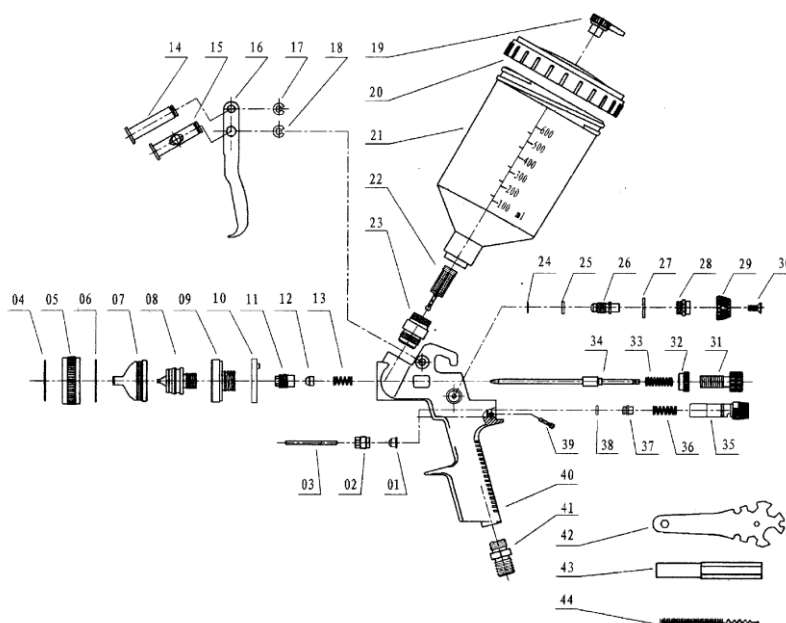

## 10. Ersatzteilliste

No	Description	No	Description	No	Description
1	Seal washer	16	Trigger	31	Fluid Adj. knob
2	Switch knob	17	Snap retainer	32	Joint cap
3	Switch pole	18	Snap retainer	33	Fluid needle spring
4	Locked spring	19	Breather plug	34	Fluid Adj. Needle
5	Nut	20	Container cover	35	Modulator
6	Washer	21	Container	36	Switch spring
7	Atomization	22	Filter	37	Switch block
8	Fluid nozzle	23	Fluid	38	O-ring
9	Fluid nozzle plug	24	Snap retainer	39	Screw
10	Washer	25	O-ring	40	Gun body
11	Direction screw	26	Pattern Adj.	41	Air inlet plug
12	Washer	27	Copper washer	42	Tool wrench
13	Spring	28	Pattern Adj. knob	43	Hex wrench
14	Trigger pin I	29	Pattern Adj. screw	44	Brush
15	Trigger pin II	30	Screw		